RFXtrx
USB RF transceiver
User guide

www.rfxcom.com

1. Table of Contents

1. Table of Contents 2
2. RFXtrx general information 3
   2.1. RFXtrx315 supported protocols 3
      2.1.1. RFXtrx315 configured for 310MHz 3
      2.1.2. RFXtrx315 configured for 315MHz 3
   2.2. RFXrec433, RFXtrx433, RFXtrx433E supported protocols 4
      2.2.1. By function 4
      2.2.2. Alphabetic list 7
   2.3. undec on 10
   2.4. Sensitivity influenced by enabled protocols 11
   2.5. RF range reduction 12
   2.6. Home Automation software 12
   2.7. Dimensions 12
   2.8. Electrical 12
   2.9. Environmental conditions 12
3. Install the USB driver 13
4. Run RFXflash on Linux under Mono 13
5. RFXmngr test program 14
   5.1. Receiver 15
   5.2. Transmitter 16
6. Flash update of the RFXtrx 17
   6.1. Update firmware in the RFXtrx 17
   6.2. Update firmware in the RFXtrx step by step 18
7. RFXtrx433 special device codes 20
   7.1. Remote commands 20
      7.1.1. X10 RF Remote 20
      7.1.2. ATI Remote Wonder 21
      7.1.3. ATI Remote Wonder Plus 22
      7.1.4. Medion Remote 23
   7.2. Harrison address conversion to switch settings 24
   7.3. Flamingo, AB400, IMPULS, Sartano, Brennenstuhl switch settings 25
   7.4. Energenie 5-gang 429.950 26
   7.5. Phenix, IDK YC-4000S switch settings 27
   7.6. HE105 switch settings 28
   7.7. MDREMOTE 29
   7.8. Aoke relay 29
8. Blyss commands 30
9. How to find the dx.com RGB LED strip driver ID 30
10. How to find the dx.com RGB LED strip driver ID (rev. 2) 30
11. How to find the Eurodomest ID 30
12. Somfy RTS 31
13. Transmit undecoded ARC commands. 32
14. Known Lighting4 devices 33
   14.1. Proluxx projection screen 33
   14.2. Kingpin (KP100) projection screen 33
   14.3. Mercury remote control mains sockets 33
   14.4. Conrad 034911 sockets 33
15. EC Declaration of Conformity 34
16. Warning: 35
17. License 35
18. Copyright notice 35
19. Revision history 36

2. RFXtrx general information

The RFXtrx transceivers and RFXrec receivers are communicating over an USB port with the Home Automation application. The RFXtrx/rec is powered by the USB port.
At startup the RFXtrx enters for 2 seconds the boot loader (red LED is on) and after this it starts the receive/transmit firmware. If valid (decode-able) packets are received the yellow LED will blink.
The RFXtrx315 and the RFXrec433 are mainly for use in the US. The RFXtrx315 can receive US X10 lighting and security sensors **or** US Visonic PowerCode sensors at 315MHz.
The RFXrec433 can receive weather sensors of different brands at 433.92MHz.
The RFXtrx433 is a transceiver (transmitter+receiver) and can receive and control a large number of sensors and other devices.
The RFXtrx433E is an extended RFXtrx433 transceiver.
Note: the listed protocols and brands are supported!

2.1. RFXtrx315 supported protocols

2.1.1. RFXtrx315 configured for 310MHz

Protocol	Enable	receive	transmit
US X10 lighting	X10	Y	Y
US X10 security	X10	Y	Y

2.1.2. RFXtrx315 configured for 315MHz

Protocol	Enable	receive	transmit
Aoke relay - http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html	-	-	Y
Visonic CodeSecure	-	planned	-
Visonic PowerCode	Visonic	Y	Y

2.2. RFXrec433, RFXtrx433, RFXtrx433E supported protocols

2.2.1. By function

Curtains, shades, projection screen, awning, gate openers
A-OK blind motors (RF01,AC114,AC123 controlled) - http://www.motorisationplus.com/
BOFU blind motors - http://www.bofumotor.com/
BTX blind motors – http://www.btxinc.com
Chamberlain CS4330CN http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336
Dolat DLM-1 controlled motors - http://www.dolat.com.cn/product1.asp?id=538
Dooya blind motors
Ematronic - http://www.ematronic.com/moteurs-volet-roulant/
Forest blind/curtain motors - http://www.forestgroup.nl/index_nl.html
Harrison curtain - http://www.harrison.nl/home2.htm
Hasta blind motors - http://www.hasta.se/
Kingpin KP100 projection screen
Louvolite one touch motorised blinds
Media Mount Projector screen
Proluxx projection screen
RAEX blind motor (YR1326 controlled) - http://www.beckermotors.co.uk/
Somfy (RFXtrx433E only) - http://www.somfy.co.uk/
Sunpery blind motors
RohrMotor24 RMF blind motors - http://www.rohrmotor24.eu/rohrmotor24
RollerTrol blind motors - http://rollertrol.com/
YOODA blind motors – http://www.sukcesgroup.pl

Temperature, humidity, weather sensors
Alecto – WS1200, WS1700, WS3500, WS4500
Auriol – H13726
Cresta
Digimax
Hama – EWS1500
Hideki weather sensors
Honeywell – TF-ATS34C
La Crosse
Lexibook – SM883
Maverick ET-732 BBQ/Smoke temperature
Meade – TS33F-M, TS34C-M http://www.meade.com/products/weatherstations/sensors.html
Meteoscan – W155, W160
NEXUS – I008T
Opus XT300 /Imagintronix Soil sensor http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&hash=item3a8778244b
Oregon Scientific / Huger
Prego P-8426 http://www.sunmarket.fi/tuote.asp?TID=11990
Proove –TSS320 & TSS330 fridge/freezer thermometer & outdoor sensors 311346,311501
RFXSensor
RUBiCSON – stektermometer 48659, 48695
Sunvic TLX1206
Sunvic TLX7506
TechnoLine/Proficell http://www.elv.de/output/controller.aspx?cid=74&detail=10&detail2=27621 - TX95-TH
TFA
UPM/Esic (very short receiving range)
Ventus – WS155
Viking
WT0122 pool thermometer

Xiron –EN6

Appliance modules, dimmers, relays, LED controllers
ANSLUT (learning mode)
Aoke relay http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html
ByeByeStandBy
Blyss lighting – http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html
Brennenstuhl
Chacon – http://www.chacon.be/
CoCo – http://www.coco-technology.com/en/home/
Conrad RSL2 – http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOSENSCHALTER-RSLR2
DI.O – http://www.di-o.be/
DomiaLite
Ebode
ELRO AB400/AB600 – http://www.elro.eu/en/products/cat/home-automation/home-control1
Energenie ENER010 – 429.935, 5-gang 429.950 - https://energenie4u.co.uk/
Etekcity –http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx
Eurodomest NL – Action
Everflourish EMW100
Flamingo
HomeEasy EU – http://www.elro.eu/en/products/cat/home-automation/
HomeEasy UK (including HE105 relay) – http://www.homeeasy.eu/
Ikea Koppla
Impuls – NL – Action
Intertechno – http://www.intertechno.at/
Kambrook RF3672 – http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054
KlikAanKlikUit – http://www.klikaanklikuit.nl/home/
LightwaveRF – http://www.lightwaverf.co.uk/
Livolo - http://www.livolo-france.com/fr/ http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html
Maplin http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka (use Lighting1 - COCO GDR2)
MDremote LED dimmer - www.ultraleds.co.uk
Mercury appliance modules – http://mercury.avsl.com/product?range=ME5124
NEXA – http://www.nexa.se/
OTIO
Phenix
Philips SBC SP370 series
Proove - http://proove.se/
RGB LED strip driver dx.com - http://www.dx.com/ order nbr: 130913, 67412 **(NEW VERSIONS NOT SUPPORTED)**
RisingSun
Sartano
Siemens (UK)
Waveman
X10 RTS10 / RFS10
X10 lighting
Xdom

Door/window, smoke and other security sensors
Aidebao security
Alecto – SA30 smoke detector
Atlantic security
Chacon KD101 smoke detector
Flamingo KD101 smoke detector
Meiantech security
NEXA KD101 smoke detector
Visonic CodeSecure
Visonic PowerCode
X10 security

Remotes
ATI Remote Wonder
ATI Remote Wonder Plus
ATI Remote Wonder II
X10 PC Remote

Chimes
1byOne Easy Chime
Byron SX chime - http://www.chbyron.eu/Byron/ByronSXRange/68/89/
Byron MP001
Chacon
Envivo – ENV1348
HomeEasy
KlikAanKlikUit
SelectPlus200689101 & SelectPlus200689103 (Action NL)

Power, gas water metering
cent-a-meter
Electrisave
OWL CM113, CM180, CM119, CM160, CM180, CM180i - http://www.theowl.com/
Revolt NC5461 - http://www.pearl.de/a-NC5462-5452.shtml
RFXMeter

Specials
DEA receivers http://www.deasystem.com/en/accessory/7/receivers (unencrypted only)
Mertik Maxitrol – Fire Place controllers
Oregon Scientific Body weight scales – BWR101, BWR102, GR101
Prego P-8426 – sauna temperature sensor http://www.sunmarket.fi/tuote.asp?TID=11990
Smartwares radiator valve http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html
Siemens SF01 - LF959RA50/LF259RB50/LF959RB50 extractor hood
X10 Ninja/Robocam – camera motor

2.2.2. Alphabetic list

Important notes:

- Ext firmware will not operate in the RFXtrx433.
- Protocol enabling is only necessary for receive. Transmit protocols are always enabled.

Protocol	Type 1	Type 2	Ext	For receive Enable protocol	transmit
1Byone Easy Chime	-	Y	Y	ByronSX	Y
A-OK blind motors RF01,AC114,AC123 - http://www.motorisationplus.com/	Y	Y	-	BlindsT1	Y
Aidebao security	Y	Y	Y	Meiantech	Y
Alecto – SA30 smoke detector	Y	Y	Y	Oregon	Y
Alecto – WS1200	Y	Y	Y	LaCrosse	-
Alecto – WS1700 and compatibles, WS3500, WS4500	-	-	Y	Rubicson	-
ANSLUT (learning mode)	Y	Y	Y	AC	Y
Aoke relay - http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html	Y	Y	Y	(not received)	Y
ATI Remote Wonder	Y	-	-	ATI	Y
ATI Remote Wonder Plus	Y	-	-	ATI	Y
ATI Remote Wonder II (only available in hardware version 1.0)	Y	-	-	ATI	-
Atlantic security	Y	Y	Y	Meiantech	Y
ByeByeStandBy	Y	Y	Y	ARC	Y
Byron SX chime - http://www.chbyron.eu/Byron/ByronSXRange/68/89/	Y	Y	Y	ByronSX	Y
Byron MP001 chime	-	-	Y	(not received)	Y
Blyss lighting - http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html	Y	Y	Y	AE	Y
BOFU blind motors - http://www.bofumotor.com/	Y	Y	Y	BlindsT0*	Y
Brennenstuhl	Y	Y	Y	Lighting4	Y
BTX blind motors – http://www.btxinc.com	-	Y	-	(not received)	Y
cent-a-meter	Y	Y	Y	Oregon	-
Chacon (learning mode) - http://www.chacon.be/	Y	Y	Y	AC	Y
Chacon (with address code wheels)	Y	Y	Y	ARC	Y
Chacon EMW200	Y	Y	Y	(not received)	Y
Chacon 54660 (equal CoCo GDR2)	Y	Y	Y	(not received)	Y
Chacon KD101 smoke detector	Y	Y	Y	always on	Y
Chamberlain CS4330CN http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336	-	-	Y	(not received)	Y
CoCo (learning mode) - http://www.coco-technology.com/en/home/	Y	Y	Y	AC	Y
CoCo (with address code wheels)	Y	Y	Y	ARC	Y
CoCo GDR2 (equal Chacon 54660)	Y	Y	Y	(not received)	Y
Conrad RSL2 - http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOSENSCHALTER-RSLR2	Y	Y	-	RSL	Y
Cresta - TX-320, TS34C, anemometer, UV sensor, rain sensor	Y	Y	Y	Hideki	-
DEA receivers http://www.deasystem.com/en/accessory/7/receivers	-	-	Y	KeeLoq	Y
Digimax	Y	Y	Y	X10	-
DI.O (learning mode) - http://www.di-o.be/	Y	Y	Y	AC	Y
DI.O (with address code wheels)	Y	Y	Y	ARC	Y
Dolat DLM-1 controlled motors - http://www.dolat.com.cn/product1.asp?id=538	-	Y	-	(not received)	Y
DomiaLite (with address code wheels)	Y	Y	Y	ARC	Y

Dooya blind motors	Y	Y	-	(not received)	Y
Ebode	Y	Y	Y	X10	Y
Electrisave	Y	Y	Y	Oregon	-
ELRO AB400 - http://www.elro.eu/en/products/cat/home-automation/home-control1	Y	Y	Y	Lighting4	Y
ELRO AB600	Y	Y	Y	ARC	Y
Ematronic RF01, AC114, AC123 - http://www.ematronic.com/moteurs-volet-roulant/	Y	Y	-	BlindsT1	Y
Energenie - https://energenie4u.co.uk/ - ENER010 – 429.935, 5-gang 429.950	Y	Y	Y	(not received)	Y
Envivo – ENV1348	-	-	Y	(not received)	Y
Etekcity – http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx	Y	Y	Y	(not received)	Y
Eurodomest (NL – Action)	-	Y	-	(not received)	Y
Everflourish EMW100	Y	Y	Y	(not received)	Y
Flamingo	Y	Y	Y	Lighting4	Y
Flamingo KD101 smoke detector	Y	Y	Y	always on	Y
Forest blind/curtain motors - http://www.forestgroup.nl/index_nl.html	Y	Y	Y	(not received)	Y
Harrison curtain - http://www.harrison.nl/home2.htm	Y	Y	Y	(not received)	Y
Hasta new blind motors - http://www.hasta.se/ * = receive only in Type2 used to get the remote ID.	Y	Y	Y	BlindsT0*	Y
Hasta old blind motors	Y	Y	-	BlindsT1	Y
Hideki weather sensors	Y	Y	Y	Hideki	-
HomeEasy EU (learning mode) - http://www.elro.eu/en/products/cat/home-automation/	Y	Y	Y	HE EU	Y
HomeEasy UK – HE105 - http://www.homeeasy.eu/	Y	Y	Y	(not received)	Y
HomeEasy UK (learning mode)	Y	Y	Y	AC	Y
HomeEasy UK (with address code wheels)	Y	Y	Y	ARC	Y
Honeywell - TF-ATS34C	Y	Y	Y	Hideki	-
Ikea Koppla	Y	-	-	(not received)	Y
Impuls (NL – Action)	Y	Y	Y	(not received)	Y
Intertechno (learning mode) - http://www.intertechno.at/	Y	Y	Y	AC	Y
Intertechno (with address code wheels)	Y	Y	Y	ARC	Y
Kambrook RF3672 – http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054	-	Y	Y	(not received)	Y
Kingpin KP100 projection screen	Y	Y	Y	(not received)	Y
KlikAanKlikUit (learning mode) - http://www.klikaanklikuit.nl/home/	Y	Y	Y	AC	Y
KlikAanKlikUit (with address code wheels)	Y	Y	Y	ARC	Y
La Crosse - TX2, TX3, TX3P, TX4, TX7, TX17, WS2300	Y	Y	Y	LaCrosse	-
Lexibook - SM883	Y	Y	Y	Hideki	-
LightwaveRF - http://www.lightwaverf.co.uk/	Y	Y	Y	AD	Y
Livolo - http ://www.livolo-France.com/fr/ - http ://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html	Y	Y	Y	(not received)	Y
Louvolite one touch motorised blinds * = receive only in Type2 used to get the remote ID.	Y	Y	Y	BlindsT0*	Y
Maplin http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka (use Lighting1 - COCO GDR2)	Y	Y	Y	(not received)	Y
Maverick ET-732 BBQ/Smoke temperature	Y	Y	Y	Hideki	-
MDremote LED dimmer - www.ultraleds.co.uk	Y	Y	Y	(not received)	Y
Meade – TS33F-M, TS34C-M	Y	Y	Y	Hideki	-

http://www.meade.com/products/weatherstations/sensors.html					
Meiantech security	Y	Y	Y	Meiantech	Y
Media Mount Projector screen	-	Y	-	(not received)	Y
Mercury appliance modules - http://mercury.avsl.com/product?range=ME5124	Y	Y	Y	(not received)	Y
Mertik Maxitrol Fire Place controllers - G6R-H4T1, G6R-H4T5, G6R-H4T ,G6R-H4TB, G6R-H4T21-Z22	Y	Y	Y	Mertik	Y
NEXA (learning mode) - http://www.nexa.se/	Y	Y	Y	AC	Y
NEXA (with address code wheels)	Y	Y	Y	ARC	Y
NEXA KD101 smoke detector	Y	Y	Y	always on	Y
NEXUS - I008T	Y	Y	Y	Hideki	-
Opus XT300 /Imagintronix Soil sensor http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&hash=item3a8778244b	Y	Y	Y	Imagintronix	-
Oregon Scientific / Huger BBQ and weather sensors - AW129, AW131, BTHGN129, BTHR918, BTHR918N, BTHR968, EW109, PCR800, RGR126, RGR682, RGR918, RGR928, RTGN318, RTGR328N, RTGR328N, RTGR368N, RTGR383, RTHN318, STR918, STR928, ,TGHN800, TGHN801, THC138, THC238, THC268, THGN122NX, THGN123N, THGN132ES, THGN132N, THGN500, THGR122(N/NX), THGR228(N/NF), THGR238, THGR268, THGR328N, THGR810, THGR918, THGR928, THGRN228NX, THN122N, THN132N, THR128, THR138, THR288(N/NF), THRN122N, THWR288A, THWR800, UV138, UVN128, UVN800, UVR128, WGR800, WGR918, WTGR800, WTGR800	Y	Y	Y	Oregon	-
Oregon Scientific weighting scales - BWR101, BWR102, GR101	Y	-	Y	Oregon	-
OTIO Lighting	Y	Y	-	RSL	Y
OWL - http://www.theowl.com/ - CM113, CM119, CM160, CM180, CM180i	Y	Y	Y	Oregon	-
Phenix	Y	Y	Y	Lighting4	Y
Philips SBC SP370 series	-	Y	-	(not received)	Y
Prego P-8426 http://www.sunmarket.fi/tuote.asp?TID=11990	Y	Y	Y	X10	-
Proluxx projection screen	Y	Y	Y	(not received)	Y
Proove –TSS320 & TSS330 fridge/freezer thermometer & outdoor sensors 311346,311501	Y	Y	Y	FineOffset	-
RAEX blind motor (YR1326 controlled) - http://www.beckermotors.co.uk/	-	Y	-	BlindsT1	Y
Revolt NC5461 - http://www.pearl.de/a-NC5462-5452.shtml	-	Y	-	RSL	-
RFY - http://www.somfy.co.uk/	-	-	Y	(not received)	Y
RFXSensor	Y	Y	Y	X10	-
RFXMeter	Y	Y	Y	X10	-
RGB LED strip driver dx.com - http://www.dx.com/ order nbr: 130913, 67412 * = receive only in Type2 used to get the RGB remote ID. **(NEW VERSIONS NOT SUPPORTED)**	Y*	Y	y*	AD*	Y
RisingSun	Y	Y	Y	Lighting4	Y
RUBiCSON - stektermometer 48659, 48695	Y	-	Y	Rubicson	-
RohrMotor24 RMF blind motors - http://www.rohrmotor24.eu/rohrmotor24	Y	Y	-	(not received)	Y
RollerTrol blind motors - http://rollertrol.com/ * = receive only in Type2 used to get the remote ID.	Y	Y	Y	BlindsT0*	Y
Sartano	Y	Y	Y	Lighting4	Y
SelectPlus200689101 & SelectPlus200689103 (Action NL)	-	Y	Y	ByronSX	Y
Siemens SF01 LF959RA50/LF259RB50/LF959RB50 extractor hood	Y	Y	Y	(not received)	Y

Siemens (UK)	Y	Y	Y	AD	Y
Smartwares radiator valve - http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html	-	-	Y	(not received)	Y
Sunpery blind motors	-	Y	-	(not received)	Y
Sunvic TLX1206	Y	Y	Y	X10	Y
Sunvic TLX7506	Y	Y	Y	X10	-
TechnoLine/Proficell http://www.elv.de/output/controller.aspx?cid=74&detail=10&detail2=27621 - TX95-TH	Y	Y	Y	Hideki	-
TFA - TS15C, TS34C,external temperature sensor 30.3133, anemometer 30.3149, UV sensor, rain sensor 30.3148, pool sensor 30.3160	Y	Y	Y	Hideki	-
UPM/Esic (very short receiving range) - WT260,WT260H,WT440H,WT450,WT450H,WDS500,RG700	Y	-	-	Hideki	-
Viking - 02035, 02038, 02811	Y	Y	Y	FineOffset	-
Visonic CodeSecure	Y	Y	Y	(not received)	-
Visonic PowerCode	Y	Y	Y	Visonic	Y
Waveman	Y	Y	Y	(not received)	Y
WT0122 pool sensor	-	-	Y	FineOffset	-
YOODA blind motors - http://www.sukcesgroup.pl	Y	Y	-	(not received)	Y
X10 Ninja/Robocam	-	Y	-	X10	Y
X10 PC Remote	Y	-	Y	X10	Y
X10 RTS10 / RFS10	Y	Y	Y	X10	Y
X10 lighting	Y	Y	Y	X10	Y
X10 security	Y	Y	Y	X10	Y
Xdom	Y	Y	Y	X10	Y
Xiron – EN6	Y	-	Y	Rubicson	-

2.3. undec on

This parameter is for internal use by RFXCOM!!!

If new sensor types are released they will most probably not be decoded by the RFXtrx firmware. For this reason we have added the option to enable receive of undecoded messages. This function is only to enable RFXCOM to add this new sensor type in the firmware if possible. If “undec on” is enabled in normal use the application will receive a lot of undecoded messages mostly as a result of RF noise or disturbed RF packets.

Important: For normal use “undec on” should be disabled

2.4. Sensitivity influenced by enabled protocols

The sensitivity of the receiver part is highly influenced by the number of protocols enabled. Lesser protocols enabled will make the receiver more sensitive for the enabled protocols.

There are a few protocols that will reduce or even eliminate receiving of other protocols if enabled.
For example:
If the AD (LightwaveRF, Siemens) protocol is enabled it can stop receiving of Meiantech / Atlantic, Oregon 3.0,Visonic and Mertik.
All other protocols are disabled if BlindsT0 is enabled.
ARC is disabled if Lighting4 is enabled.

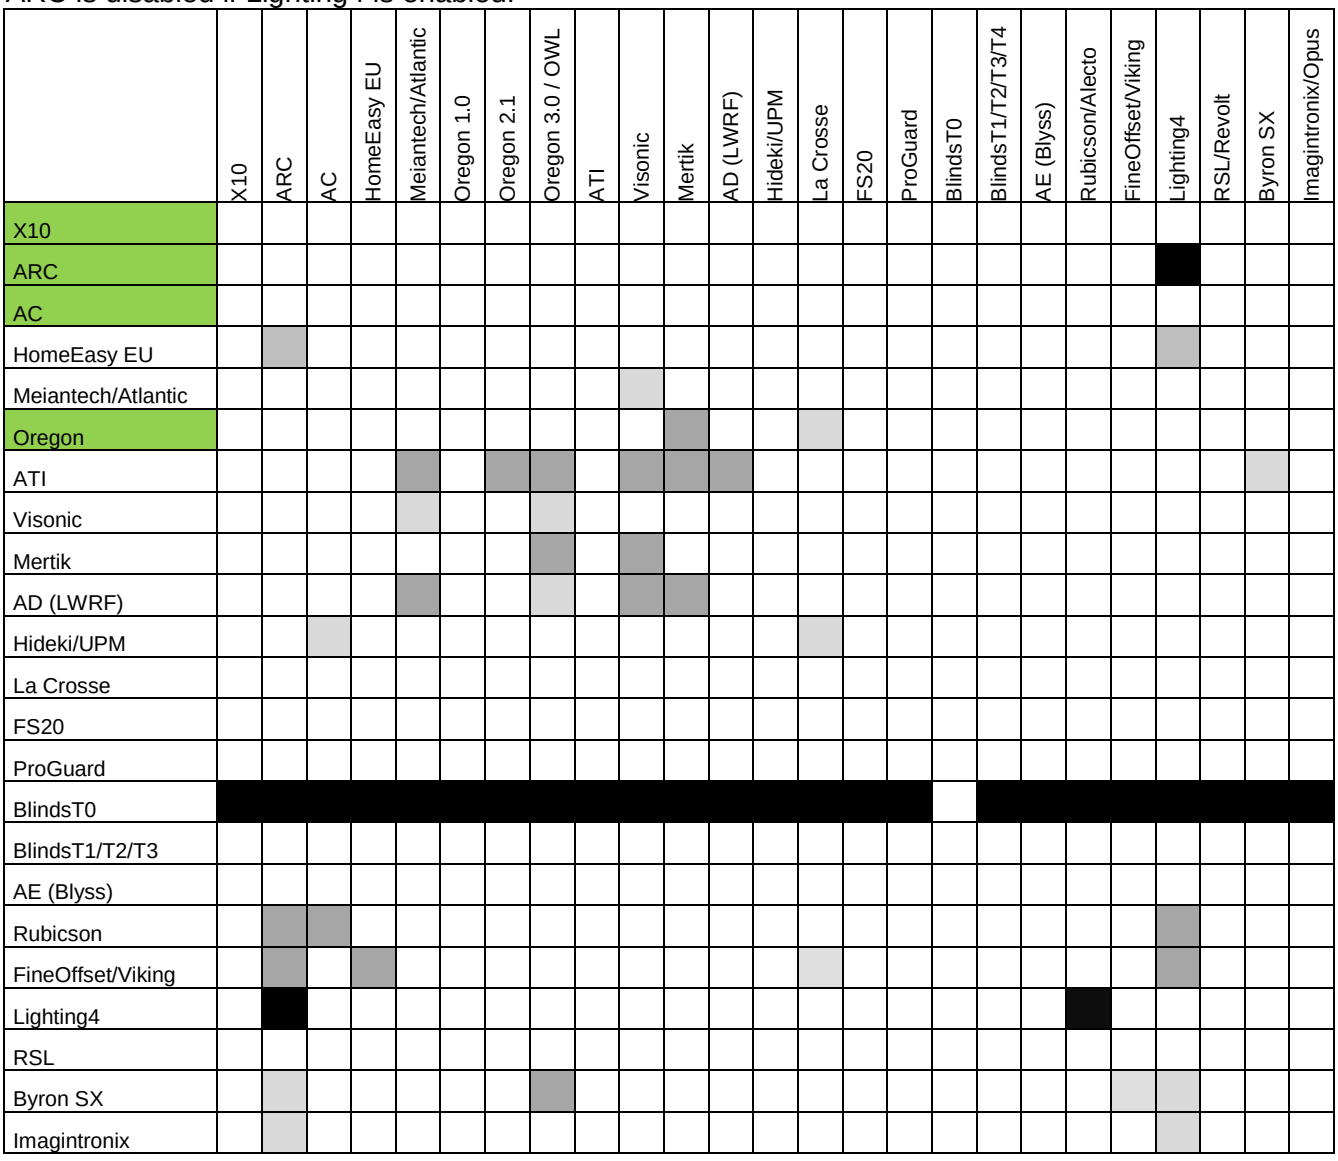

Green = enabled by default

2.5. RF range reduction

The RF signals operating distance is reduced when the signal has to pass through walls.

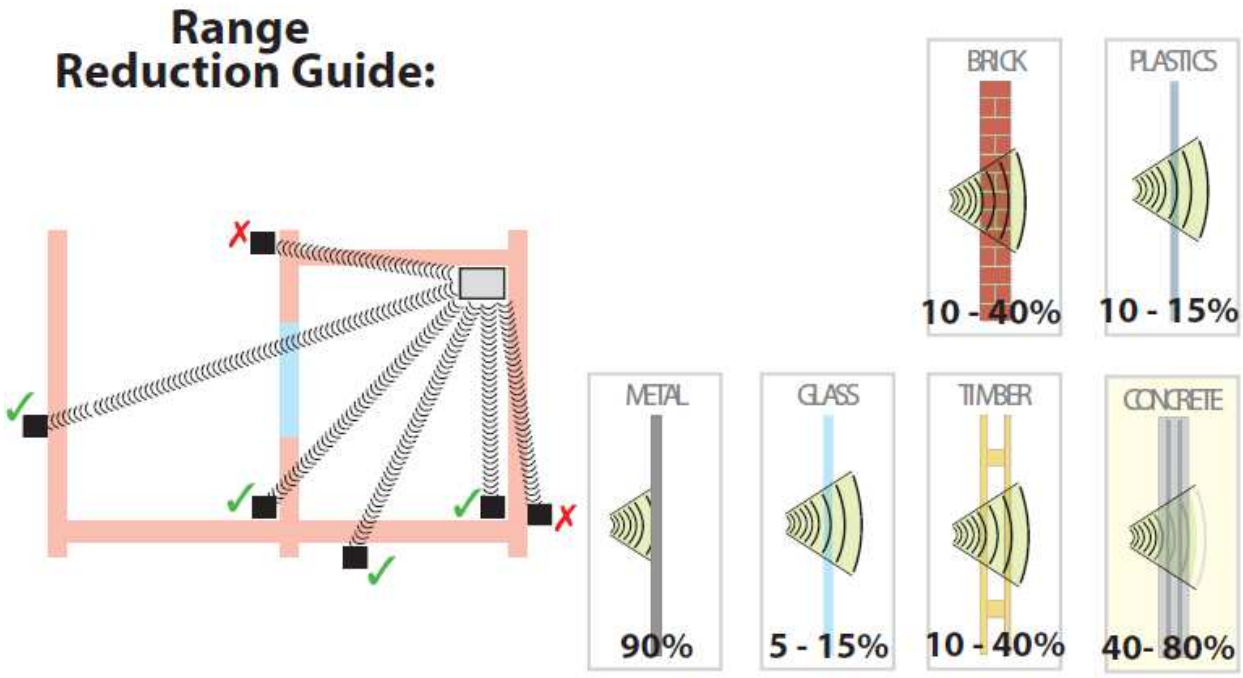

2.6. Home Automation software

For the list of Home Automation software that supports the RFXtrx see the web site
www.rfxcom.com

2.7. Dimensions

The dimensions of the RFXtrx/RFXrec are: 83.5 x 42 x 15 mm
Total height from bottom to antenna top is 122mm

The dimensions of the RFXtrx433E are: 83 x 59 x 22 mm
Total height from bottom to antenna top is 130mm

2.8. Electrical

The RFXtrx is powered by the 5 Volt of the USB interface.

Operating current;

Receive mode:	28 mA (0.14Watt)
Transmit mode:	45 mA

The RFXtrx Radiated RF power is 10dBm max.

2.9. Environmental conditions

Normal operating:	15°C to 35°C
Absolute min-max temperature:	-10°C to 55°C

3. Install the USB driver

The RFXtrx has the FTDI FT232R USB interface chip installed.

The USB drivers are available at http://www.ftdichip.com/Drivers/VCP.htm

4. Run RFXflash on Linux under Mono

Open a Terminal screen in Linux (Ctrl-Alt-T)

Execute once:

Install Mono:
[sudo] **apt-get install mono-runtime**

Install VisualBasic support under Mono:
[sudo] **apt-get install libmono-microsoft-visualbasic8.0-cil**

If the USB device is created as ttyACMx you will need to create a link between /dev/ttyACMx and a serial port /dev/ttySx.
This is not necessary if the device is created as /dev/ttyUSBx !!
[sudo] **ln -sf /dev/ttyACM1 /dev/ttyS3**

Note: sudo must be entered without brackets [ ]. sudo is required if not running as super user.

Launch the RFXflash.exe program.
[sudo] **mono RFXflash.exe**

Note: RFXmngr does not operate under mono!

5. RFXmngr test program

The RFXmngr program supports decoding of received data and allows you to transmit commands.
After the connection the RFXmngr program transmits a Reset and Get Status command so that it will know the RFXtrx type and configuration settings:

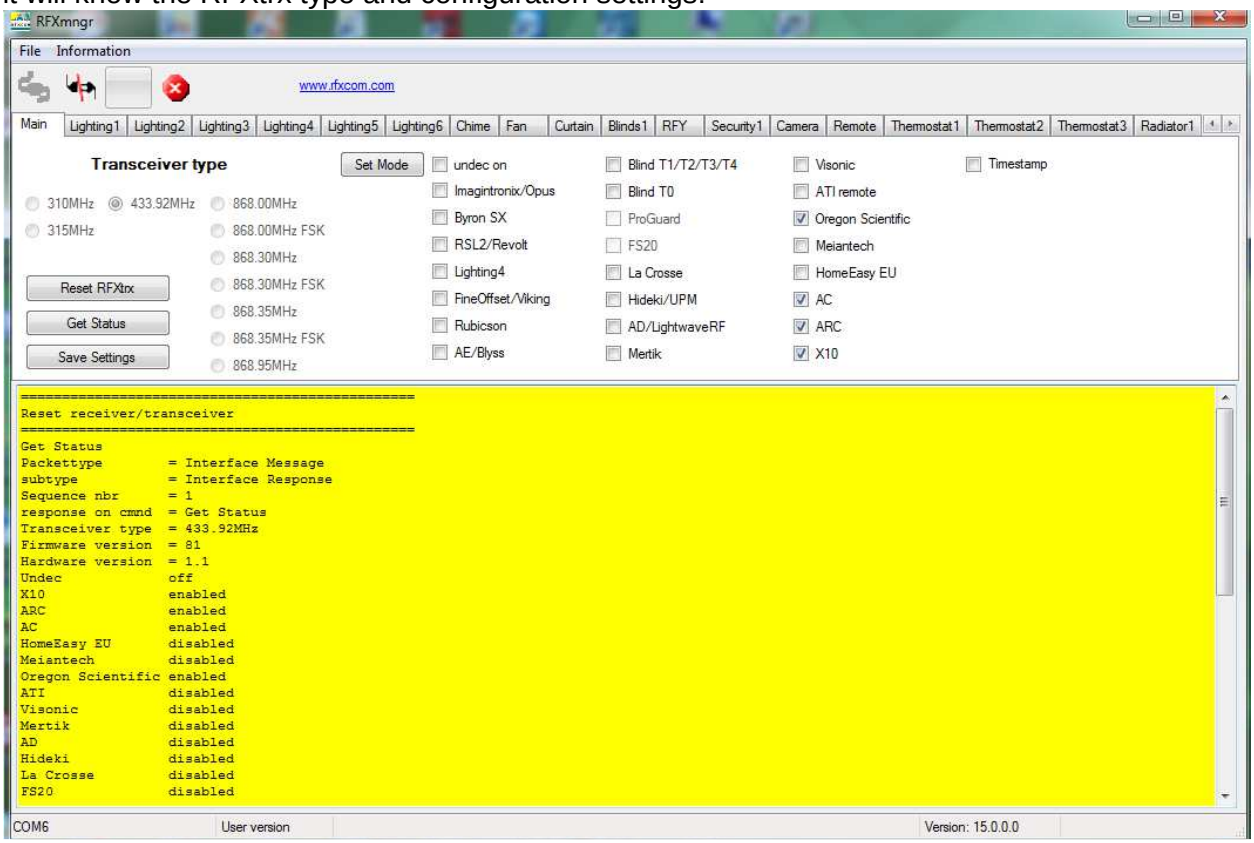

Transmitter protocols are always enabled but receiver protocols can be disabled. This is very useful because the receiver will become more sensitive when protocols not used are disabled. So select only the protocols to be used, click **Set mode** and click **Save Settings**.

Note that these settings are lost after a firmware update and need to be set again.

5.1. Receiver

The RF protocols to be received can be configured on the Main tab at **Set Mode**.
Click **Save Settings** to save the selected protocols in non-volatile memory of the RFXtrx. This configuration is now restored every time after a power up.
Note that these settings are lost after a firmware update and need to be set again.
Note: Protocol enabling is only necessary for receive. Transmit protocols are always enabled.

The received RF data is decoded and displayed in the yellow window.

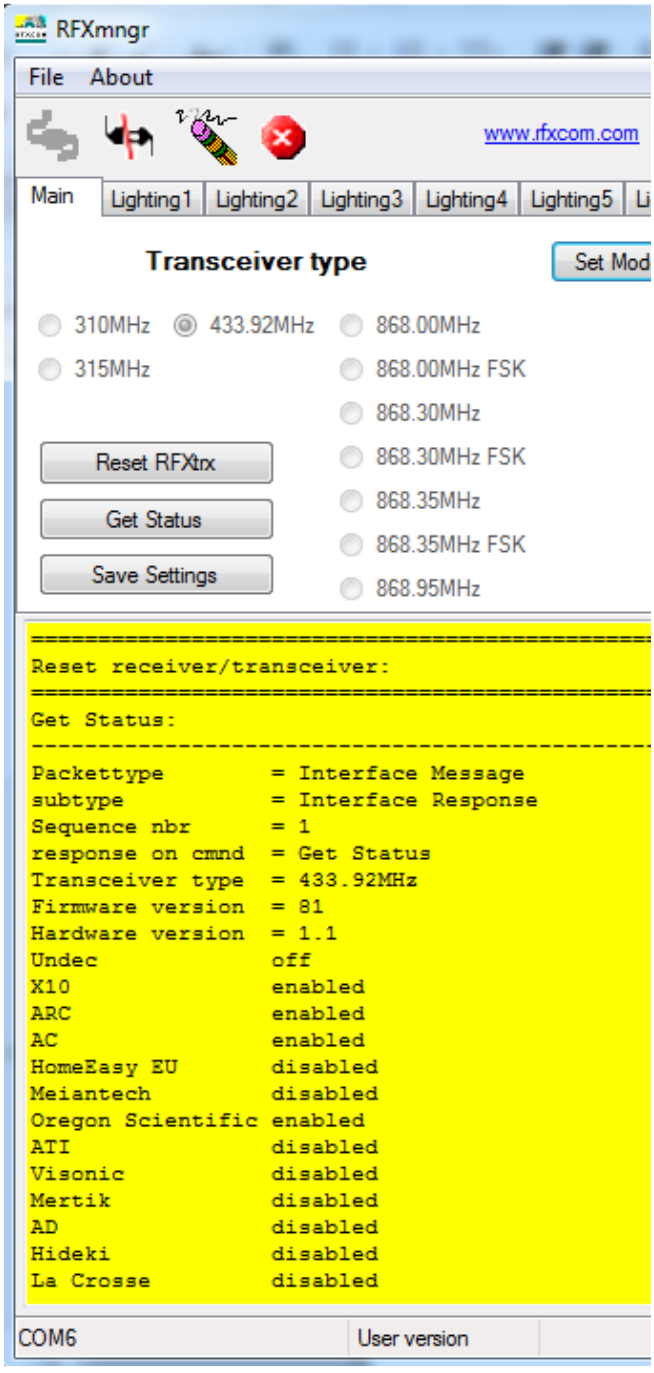

5.2. Transmitter

The tabs after the Main tab are used to send commands to the transmitter.
For example Lighting1 is used to send X10, ARC and some more.
Note: Protocol enabling is only necessary for receive. Transmit protocols are always enabled.

Select Type to see which protocols are supported on the different tabs.

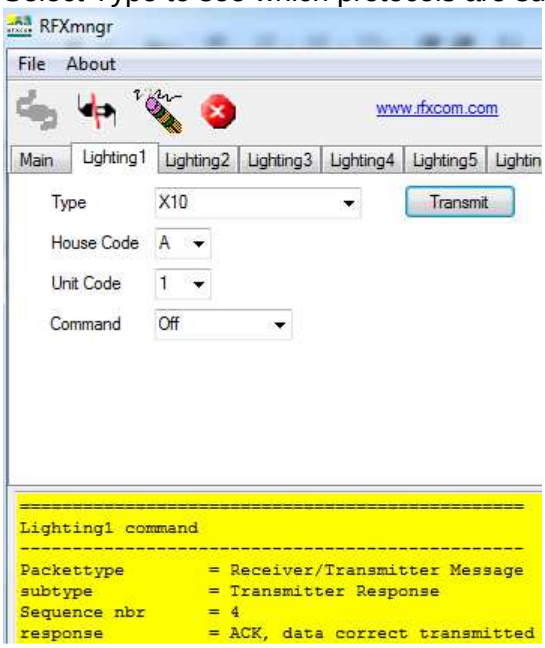

The transmitted commands are displayed in the yellow window including the acknowledge send by the RFXtrx, in the example above “ACK, data correct transmitted“.

6. Flash update of the RFXtrx

6.1. Update firmware in the RFXtrx

Firmware is flashed in the RFXtrx using this procedure:

1. Depending on the RFXtrx type download the latest RFXtrx315_yy.hex, RFXrec433_yy.hex or RFXtrx433_yy.hex firmware file.
2. Connect the RFXtrx to a Windows system or Linux under MONO
3. Stop any program that is connected to the RFXtrx.
4. Start the RFXflash program (version 4.0.0.0 or higher)
5. Select the USB RFXtrx COM port and click the CONNECT button, (the red LED should switch on now)
6. Load the correct .hex firmware file for your RFXtrx,
7. Click the WRITE button,
8. Click the Normal Execution mode button.

IMPORTANT:

1. Do not interrupt the flash procedure when started.
2. It can happen that the flash procedure ends with a pop-up screen indicating errors. Just disconnect the RFXtrx and start again at step 5 until the flash procedure if finished without errors.

If the red LED does not switch on if you click the CONNECT button:

1. Check if you have selected the correct USB COM port.
2. If you have flashed the RFXtrx before and interrupted the flash procedure it is possible that the RFXtrx does not enter the flash state. Contact support@rfxcom.com for help.

Note: Receiver Settings are lost after a firmware update and have to be set again.

6.2. Update firmware in the RFXtrx step by step

- Click the Connect to Device button.

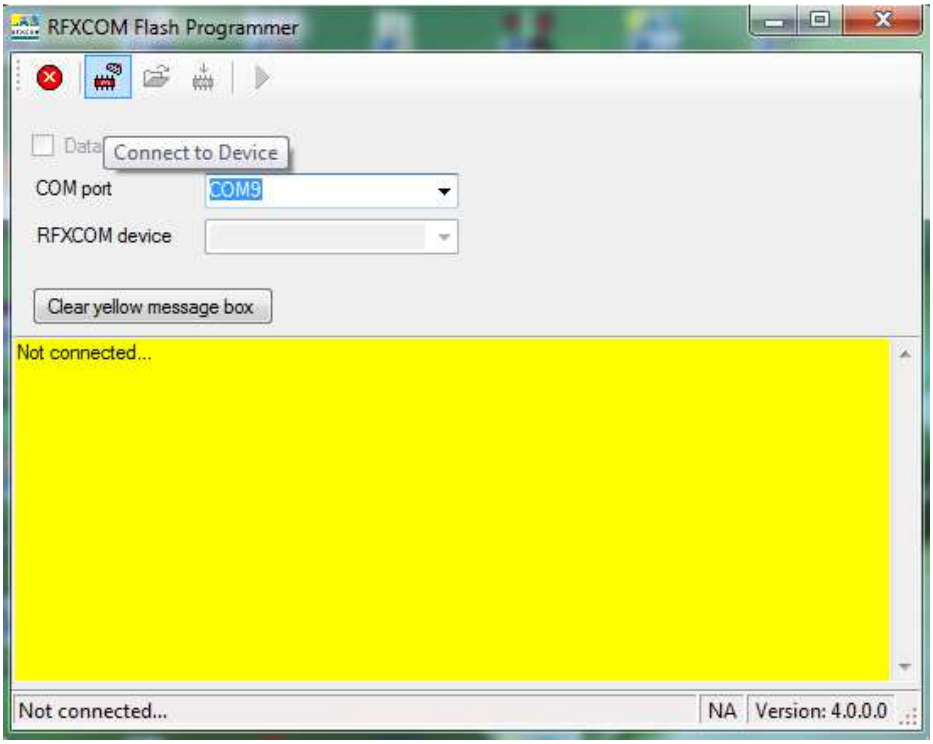

The RFXtrx will automatically switch from normal mode to the bootloader now.

- Click the Open HEX file button and load the RFXtrx***yyy_xx***.hex file
  Be sure to load the latest firmware file for the RFXtrx.
  yyy indicates the RFXtrx frequency, so load the RFXtrx433 for an RFXtrx433!
  xx indicates the firmware version.

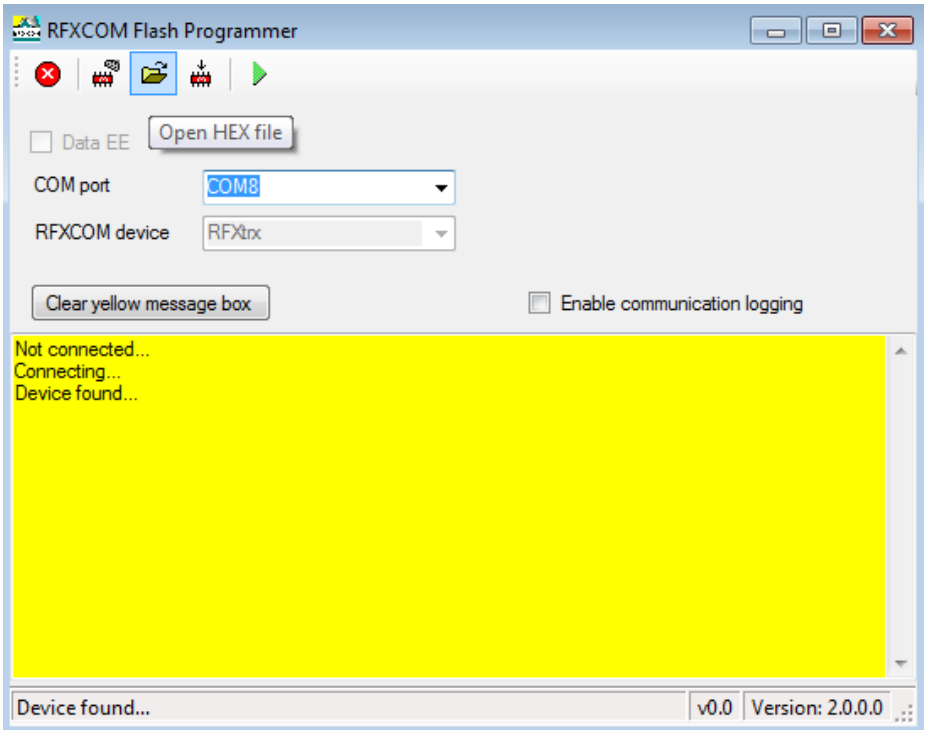

- Click the Write device button and the RFXtrx is flashed.

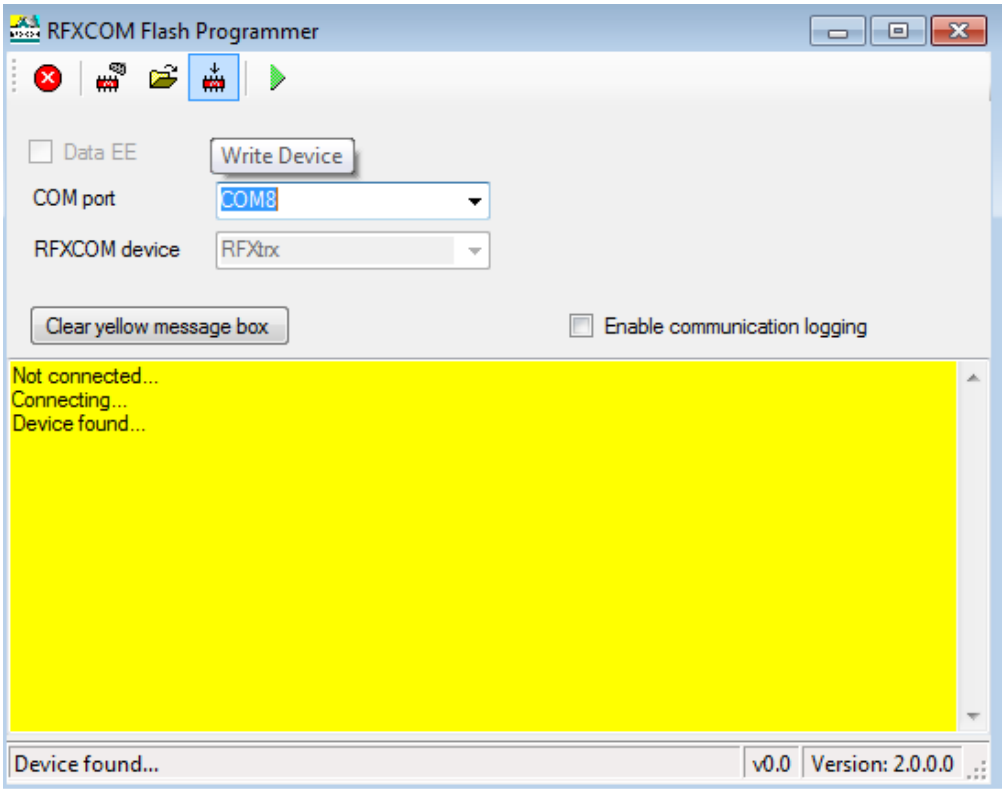

- Click on the Normal Execution Mode button to set the RFXtrx to running mode.

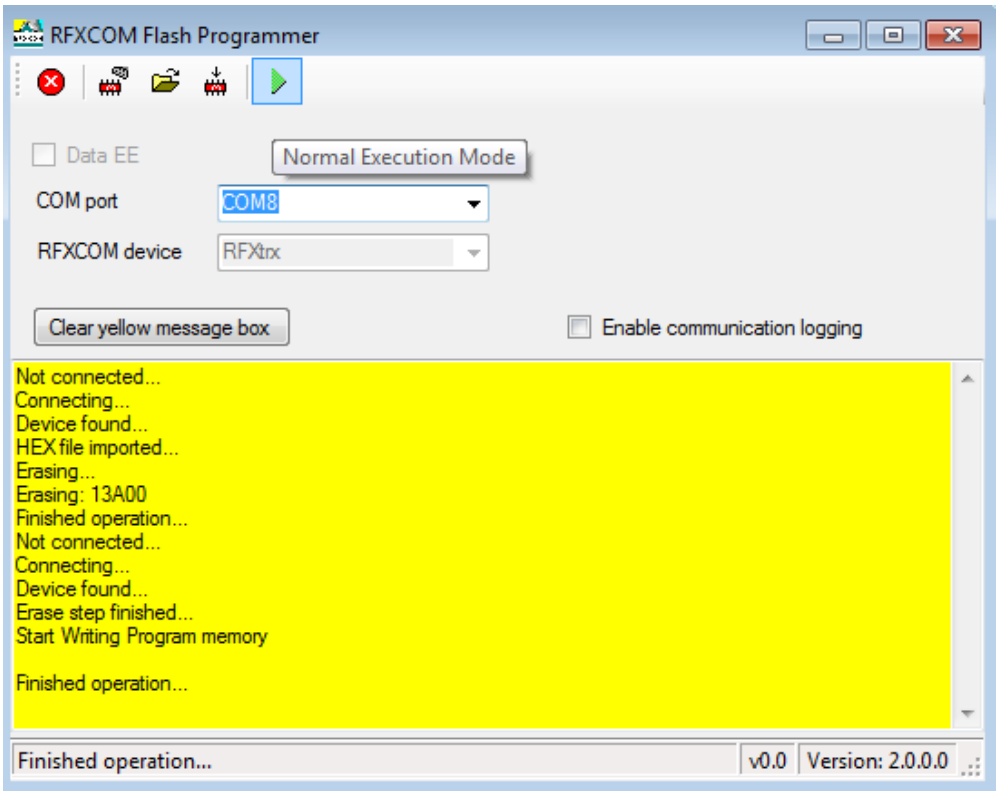

Note: Receiver Settings are lost after a firmware update and have to be set again.

7. RFXtrx433 special device codes

7.1. Remote commands

7.1.1. X10 RF Remote

Dec	Hex	Button
2	02	0
18	12	8
34	22	4
56	38	Rewind
58	3A	Info
64	40	CHAN+
66	42	2
82	52	Ent
96	60	VOL+
98	62	6
99	63	Stop
100	64	Pause
112	70	Cursor-left
113	71	Cursor-right
114	72	Cursor-up
115	73	Cursor-down
116	74	Cursor-up-left
117	75	Cursor-up-right
118	76	Cursor-down-right
119	77	Cursor-down-left
120	78	left mouse
121	79	left mouse-End
123	7B	Drag
124	7C	right mouse
125	7D	right mouse-End
130	82	1
146	92	9
160	A0	MUTE
162	A2	5
176	B0	Play
182	B6	Menu
184	B8	Fast Forward
186	BA	A+B
192	C0	CHAN-
194	C2	3
201	C9	Exit
209	D1	MP3
210	D2	DVD
211	D3	CD
212	D4	PC / Shift-4
213	D5	Shift-5
214	D6	Shift-Ent
215	D7	Shift-Teletext
216	D8	Text
217	D9	Shift-Text
224	E0	VOL-
226	E2	7
242	F2	Teletext
255	FF	Record

7.1.2. ATI Remote Wonder

Dec	Hex	Button
0	00	A
1	01	B
2	02	power
3	03	TV
4	04	DVD
5	05	?
6	06	Guide
7	07	Drag
8	08	VOL+
9	09	VOL-
10	0A	MUTE
11	0B	CHAN+
12	0C	CHAN-
13	0D	1
14	0E	2
15	0F	3
16	10	4
17	11	5
18	12	6
19	13	7
20	14	8
21	15	9
22	16	txt
23	17	0
24	18	snapshot ESC
25	19	C
26	1A	^
27	1B	D
28	1C	TV/RADIO
29	1D	<
30	1E	OK
31	1F	>
32	20	<-
33	21	E
34	22	v
35	23	F
36	24	Rewind
37	25	Play
38	26	Fast forward
39	27	Record
40	28	Stop
41	29	Pause
44	2C	TV
45	2D	VCR
46	2E	RADIO
47	2F	TV Preview
48	30	Channel list
49	31	Video Desktop
50	32	red
51	33	green
52	34	yellow
53	35	blue
54	36	rename TAB
55	37	Acquire image
56	38	edit image
57	39	Full screen
58	3A	DVD Audio
112	70	Cursor-left
113	71	Cursor-right
114	72	Cursor-up
115	73	Cursor-down
116	74	Cursor-up-left
117	75	Cursor-up-right
118	76	Cursor-down-right
119	77	Cursor-down-left
120	78	V
121	79	V-End
124	7C	X
125	7D	X-End

7.1.3. ATI Remote Wonder Plus

Dec	Hex	Button
0	00	A
1	01	B
2	02	power
3	03	TV
4	04	DVD
5	05	?
6	06	Guide
7	07	Drag
8	08	VOL+
9	09	VOL-
10	0A	MUTE
11	0B	CHAN+
12	0C	CHAN-
13	0D	1
14	0E	2
15	0F	3
16	10	4
17	11	5
18	12	6
19	13	7
20	14	8
21	15	9
22	16	txt
23	17	0
24	18	Open Setup Menu
25	19	C
26	1A	^
27	1B	D
28	1C	FM
29	1D	<
30	1E	OK
31	1F	>
32	20	Max/Restore Window
33	21	E
34	22	v
35	23	F
36	24	Rewind
37	25	Play
38	26	Fast forward
39	27	Record
40	28	Stop
41	29	Pause
42	2A	TV2
43	2B	Clock
44	2C	TV
45	2D	VCR
46	2E	RADIO
47	2F	TV Preview
48	30	Channel list
49	31	Video Desktop
50	32	red
51	33	green
52	34	yellow
53	35	blue
54	36	rename TAB
55	37	Acquire image
56	38	edit image
57	39	Full screen
58	3A	DVD Audio
112	70	Cursor-left
113	71	Cursor-right
114	72	Cursor-up
115	73	Cursor-down
116	74	Cursor-up-left
117	75	Cursor-up-right
118	76	Cursor-down-right
119	77	Cursor-down-left
120	78	Left Mouse Button
121	79	V-End
124	7C	Right Mouse Button
125	7D	X-End

7.1.4. Medion Remote

Dec	Hex	Button
0	00	Mute
1	01	B
2	02	power
3	03	TV
4	04	DVD
5	05	Photo
6	06	Music
7	07	Drag
8	08	VOL-
9	09	VOL+
10	0A	MUTE
11	0B	CHAN+
12	0C	CHAN-
13	0D	1
14	0E	2
15	0F	3
16	10	4
17	11	5
18	12	6
19	13	7
20	14	8
21	15	9
22	16	txt
23	17	0
24	18	snapshot ESC
25	19	DVD MENU
26	1A	^
27	1B	Setup
28	1C	TV/RADIO
29	1D	<
30	1E	OK
31	1F	>
32	20	<-
33	21	E
34	22	v
35	23	F
36	24	Rewind
37	25	Play
38	26	Fast forward
39	27	Record
40	28	Stop
41	29	Pause
44	2C	TV
45	2D	VCR
46	2E	RADIO
47	2F	TV Preview
48	30	Channel list
49	31	Video Desktop
50	32	red
51	33	green
52	34	yellow
53	35	blue
54	36	rename TAB
55	37	Acquire image
56	38	edit image
57	39	Full screen
58	3A	DVD Audio
112	70	Cursor-left
113	71	Cursor-right
114	72	Cursor-up
115	73	Cursor-down
116	74	Cursor-up-left
117	75	Cursor-up-right
118	76	Cursor-down-right
119	77	Cursor-down-left
120	78	V
121	79	V-End
124	7C	X
125	7D	X-End

7.2. Harrison address conversion to switch settings

The address used is converted to the address selected in the Harrison curtain motor using the table below.

switch	1	2	3	4		5	6	7	8
	H	H	H	H		X	X	X	X
A	0	1	1	0	1	0	0	0	0
B	0	1	1	1	2	0	0	0	1
C	0	1	0	0	3	0	0	1	0
D	0	1	0	1	4	0	0	1	1
E	1	0	0	0	5	0	1	0	0
F	1	0	0	1	6	0	1	0	1
G	1	0	1	0	7	0	1	1	0
H	1	0	1	1	8	0	1	1	1
I	1	1	1	0	9	1	0	0	0
J	1	1	1	1	10	1	0	0	1
K	1	1	0	0	11	1	0	1	0
L	1	1	0	1	12	1	0	1	1
M	0	0	0	0	13	1	1	0	0
N	0	0	0	1	14	1	1	0	1
O	0	0	1	0	15	1	1	1	0
P	0	0	1	1	16	1	1	1	1

H H H H = House code
X X X X = device code

Switch position in the motor:
Up = 1
Middle = not used!!!!
Down = 0

Examples:
If you assign the address E7 (1000 0110) to the curtain motor then set the switches to: 1=up, 2=down, 3=down, 4=down, 5=down, 6=up, 7=up, 8=down

If you assign the address A2 (0110 0001) to the curtain motor then set the switches to: 1=down, 2=up, 3=up, 4=down, 5=down, 6=down, 7=down, 8=up

7.3. Flamingo, AB400, IMPULS, Sartano, Brennenstuhl switch settings

Use type ELRO AB400D
Note that the HC (House Code A-P) is the house code used in programs and has no direct relation with the A,B,C,D,E buttons on the remotes!

```
    1 2 3 4   <== switches
HC==========
A   0 0 0 0
B   0 0 0 1
C   0 0 1 0
D   0 0 1 1
E   0 1 0 0
F   0 1 0 1
G   0 1 1 0
H   0 1 1 1
I   1 0 0 0
J   1 0 0 1
K   1 0 1 0
L   1 0 1 1
M   1 1 0 0
N   1 1 0 1
O   1 1 1 0
P   1 1 1 1
```

	5 A B C D E 5 6 7 8 9 10		5 A B C D E <== switches 5 6 7 8 9 10 <== OR switches
DC		DC	
1	0 0 0 0 0 0	33	0 0 0 0 0 1
2	0 0 0 1 0 0	34	0 0 0 1 0 1
3	0 0 1 0 0 0	35	0 0 1 0 0 1
4	0 0 1 1 0 0	36	0 0 1 1 0 1
5	0 1 0 0 0 0	37	0 1 0 0 0 1
6	0 1 0 1 0 0	38	0 1 0 1 0 1
7	0 1 1 0 0 0	39	0 1 1 0 0 1
8	0 1 1 1 0 0	40	0 1 1 1 0 1
9	1 0 0 0 0 0	41	1 0 0 0 0 1
10	1 0 0 1 0 0	42	1 0 0 1 0 1
11	1 0 1 0 0 0	43	1 0 1 0 0 1
12	1 0 1 1 0 0	44	1 0 1 1 0 1
13	1 1 0 0 0 0	45	1 1 0 0 0 1
14	1 1 0 1 0 0	46	1 1 0 1 0 1
15	1 1 1 0 0 0	47	1 1 1 0 0 1
16	1 1 1 1 0 0	48	1 1 1 1 0 1
17	0 0 0 0 1 0	49	0 0 0 0 1 1
18	0 0 0 1 1 0	50	0 0 0 1 1 1
19	0 0 1 0 1 0	51	0 0 1 0 1 1
20	0 0 1 1 1 0	52	0 0 1 1 1 1
21	0 1 0 0 1 0	53	0 1 0 0 1 1
22	0 1 0 1 1 0	54	0 1 0 1 1 1
23	0 1 1 0 1 0	55	0 1 1 0 1 1
24	0 1 1 1 1 0	56	0 1 1 1 1 1
25	1 0 0 0 1 0	57	1 0 0 0 1 1
26	1 0 0 1 1 0	58	1 0 0 1 1 1
27	1 0 1 0 1 0	59	1 0 1 0 1 1
28	1 0 1 1 1 0	60	1 0 1 1 1 1
29	1 1 0 0 1 0	61	1 1 0 0 1 1
30	1 1 0 1 1 0	62	1 1 0 1 1 1
31	1 1 1 0 1 0	63	1 1 1 0 1 1
32	1 1 1 1 1 0	64	1 1 1 1 1 1

Examples:

A1	0 0 0 0 0 0 0 0 0 0
A15	0 0 0 0 1 1 1 0 0 0
N2	1 1 0 1 0 0 0 1 0 0
N11	1 1 0 1 1 0 1 0 0 0

0 = switch off
1 = switch on

7.4. Energenie 5-gang 429.950

To know the codes to use open the remote and check the 1 to 5 jumpers connected.
If a jumper connection is open it is a 1. If connected it is a 0 (zero)

```
   1 2 3 4    jumper setting in the remote
HC=========
A  0 0 0 0
B  0 0 0 1
C  0 0 1 0
D  0 0 1 1
E  0 1 0 0
F  0 1 0 1
G  0 1 1 0
H  0 1 1 1
I  1 0 0 0
J  1 0 0 1
K  1 0 1 0
L  1 0 1 1
M  1 1 0 0
N  1 1 0 1
O  1 1 1 0
P  1 1 1 1
```

If jumper 5 is open (1) than add 5 to the remote code.

Examples:

Jumper	Button	Code
1 2 3 4 5		
1 0 0 0 0	1	I1
1 0 0 0 1	1	I6

7.5. Phenix, IDK YC-4000S switch settings

Use type ELRO AB400D
Note that the HC (House Code A-P) is the house code used in programs and has no direct relation with the A,B,C,D,E buttons on the remotes!

HC	switch 1	2	3	4
A	0	0	0	0
B	0	0	0	1
C	0	0	1	0
D	0	0	1	1
E	0	1	0	0
F	0	1	0	1
G	0	1	1	0
H	0	1	1	1
I	1	0	0	0
J	1	0	0	1
K	1	0	1	0
L	1	0	1	1
M	1	1	0	0
N	1	1	0	1
O	1	1	1	0
P	1	1	1	1

DC	switch 5	A	B	C	D
1	0	0	0	0	0
2	0	0	0	1	0
3	0	0	1	0	0
4	0	0	1	1	0
5	0	1	0	0	0
6	0	1	0	1	0
7	0	1	1	0	0
8	0	1	1	1	0
9	1	0	0	0	0
10	1	0	0	1	0
11	1	0	1	0	0
12	1	0	1	1	0
13	1	1	0	0	0
14	1	1	0	1	0
15	1	1	1	0	0
16	1	1	1	1	0
17	0	0	0	0	1
18	0	0	0	1	1
19	0	0	1	0	1
20	0	0	1	1	1
21	0	1	0	0	1
22	0	1	0	1	1
23	0	1	1	0	1
24	0	1	1	1	1
25	1	0	0	0	1
26	1	0	0	1	1
27	1	0	1	0	1
28	1	0	1	1	1
29	1	1	0	0	1
30	1	1	0	1	1
31	1	1	1	0	1
32	1	1	1	1	1

7.6. HE105 switch settings

Unitnr	HE105 switches				
	1	2	3	4	5
0	0	0	0	0	0
1	0	0	0	0	1
2	0	0	0	1	0
3	0	0	0	1	1
4	0	0	1	0	0
5	0	0	1	0	1
6	0	0	1	1	0
7	0	0	1	1	1
8	0	1	0	0	0
9	0	1	0	0	1
10	0	1	0	1	0
11	0	1	0	1	1
12	0	1	1	0	0
13	0	1	1	0	1
14	0	1	1	1	0
15	0	1	1	1	1
16	1	0	0	0	0
17	1	0	0	0	1
18	1	0	0	1	0
19	1	0	0	1	1
20	1	0	1	0	0
21	1	0	1	0	1
22	1	0	1	1	0
23	1	0	1	1	1
24	1	1	0	0	0
25	1	1	0	0	1
26	1	1	0	1	0
27	1	1	0	1	1
28	1	1	1	0	0
29	1	1	1	0	1
30	1	1	1	1	0
31	1	1	1	1	1

7.7. MDREMOTE

This MDREMOTE has been tested.
http://www.ultraleds.co.uk/mini-dimmer-with-rf-remote-control-12-or-24v-dc-12a-maximum.html

The RFXtrx433 can only transmit MDREMOTE commands.

Procedure to find the ID of the MDREMOTE:
In RFXmngr enable the X10 protocol and enable “Undec on”
Press a button on the MDREMOTE remote.
The undecoded message contains the ID in the 2nd and 3rd byte, for example:

```
----------------------------------------------
Packettype      = UNDECODED RF Message
UNDECODED NEC:20AF6801D1
```

The 2 bytes after 20 is the MDREMOTE ID, in this example AF 68

7.8. Aoke relay

The Aoke 12V DC - 315MHz or 433.92MHz 1 channel relay is available at www.aliexpress.com store No.110758. Indicate clearly the required frequency when ordering!

The 1 channel learning relays can be used, see the picture below.
For example, for 1 relay:
http://www.aliexpress.com/store/product/DC12V-1CH-wireless-switch-remote-control-system-remote-control-switch-for-guard-door-window-curtain/110758_936534863.html
or for 6 relays:
http://www.aliexpress.com/store/product/ak-DC12V-1CH-RF-rocker-switch-livolo-switch-system-in-china-j-12a-108d-smart-house/110758_1007306574.html

The jumper next to the learning button defines to operating mode:
Open = momentary
1-2 = toggle mode
2-3 = on/off mode (to be used with the RFXtrx)

8. Blyss commands

Some Blyss devices, like the Blyss motors, require a special command sequence number. To simplify it; 0,1,2,3,4,0,1,…
This sequence number is normally created by the Blyss remote but now also by the RFXtrx433.

If you use a Blyss remote and the application (Domoticz, DomotiGa, Homeseer…) does not sync with the received Blyss command you will see that you need to send multiple commands with the RFXtrx433 before the Blyss device will respond.
For example,
The Blyss remote transmits with the sequence numbers 0,1,2
If the RFXtrx433 transmits now with sequence number 0 it will not be seen by the Blyss device as a valid command and at the time the RFXtrx433 transmits the commands 1,2,3 the command will be detected as valid when it receives the command with sequence number 3.

The same is true for the remote. If you transmit commands with the RFXtrx433 and after that with a Blyss remote you need to transmit several commands with the remote before the Blyss device responds.

I guess the same behaviour will show if you use multiple Blyss remotes.

9. How to find the dx.com RGB LED strip driver ID

Valid for the TRC02 remote with 2 batteries.

Flash the RFXtrx433 with Type2 firmware to be able to receive the remote ID in RFXmngr.
In RFXmngr enable only the LightwaveRF (AD) protocol.

```
----------------------------------------------
Packettype    = Lighting5
subtype       = RGB TRC02
Sequence nbr  = 5
ID            = FCC48B
Command       = On
Signal level  = 8
```

The ID is: FC C4 8B

If necessary flash the RFXtrx433 back to Type1 if Type2 does not support devices you need. (See chapter 2.2)

10. How to find the dx.com RGB LED strip driver ID (rev. 2)

Valid for the TRC02 remote with 3 batteries.

In RFXmngr enable only the Lighting4 protocol.

```
----------------------------------------------
Packettype    = Lighting4
subtype       = PT2262
Sequence nbr  = 29
Code          = 161C84
```

The ID is: 16 1C

11. How to find the Eurodomest ID

You can assign a random ID to the Eurodomest. If you want to use the same ID as the remote you can find the ID of the remote using RFXmngr.
Start RFXmngr and enable only the Lighting4 protocol.
Press a button on the remote and you will receive a message like:

```
----------------------------------------------
Packettype    = Lighting4
subtype       = PT2262
Sequence nbr  = 12
Code          = 6DFE0F
```

The ID is: 6 DF E0

12. Somfy RTS

Somfy RTS* devices can only be controlled by the RFXtrx433E. (not with the RFXtrx433)
The RFXtrx433E version is an RFXtrx433 with additional hardware to enable the RFY protocol used to control Somfy RTS.

To pair the Somfy RTS device:
- Select a unique ID and unitcode for the RFXCOM RFY device.
- Disconnect power from all Somfy RTS devices except the device to pair.
- Press the Program button > 2 seconds on the original Somfy remote until the Somfy device responds.
- Transmit a Program command with the RFXtrx433E. The Somfy RTS device should respond indicating the pair command was successful.

The RFXCOM RFY remote is registered in the RFXtrx433E by sending a Program command.
Up to 30 RFXCOM RFY remotes can be registered in the RFXtrx433E.
Remotes can be erased from the RFXtrx433E using the RFXmngr program.

The Somfy RTS device can be controlled by any application as long as the same ID and Unit Code are used.
For example if the RTS device is paired using RFXmngr with ID=1 02 03 and Unit Code 1, the RTS device can be controlled with Homeseer using the same ID and unit code.

* Somfy RTS are registered trademarks of Somfy System, Inc.

13. Transmit undecoded ARC commands.

Plug-in modules or other equipment with a PT2262 can be controlled using Lighting4.
There are a lot of brands using the PT2262 and some of them use the same timing (350) as used by the ARC devices but a different protocol definition.

Messages will be received as undecoded ARC messages if the protocol definition does not match the definition of the ARC protocol. Remote commands are received as ARC commands with a wrong house and device code and/or command code or as undecoded ARC messages if “undec on” is enabled. Decoding of these remotes is therefore not possible because they overlap the ARC protocol partly.
But transmitting these commands is possible using the Lighting4 command.

So if we receive this command UNDECODED ARC:18014403:
(18 is not used)

hex to binary table

```
0=0 0 0 0
1=0 0 0 1
2=0 0 1 0
3=0 0 1 1
4=0 1 0 0
5=0 1 0 1
6=0 1 1 0
7=0 1 1 1
8=1 0 0 0
9=1 0 0 1
A=1 0 1 0
B=1 0 1 1
C=1 1 0 0
D=1 1 0 1
E=1 1 1 0
F=1 1 1 1
```

0 1 4 4 0 3 = selection box 0000 0001 0100 0100 0000 0011
Not selected = 0, box selected = 1

And the Lighting4 command contains the same “undec code” 01 44 03:
Lighting4 command:09 13 00 04 **01 44 03** 01 5E 00
pulse timing is 350 = hex 015E

Another example:
For this command UNDECODED ARC:18014430 set on the Lighting4 tab in RFXmngr selection box 1 to 24 to 0 1 4 4 3 0 = 0000 0001 0100 0100 0011 0000

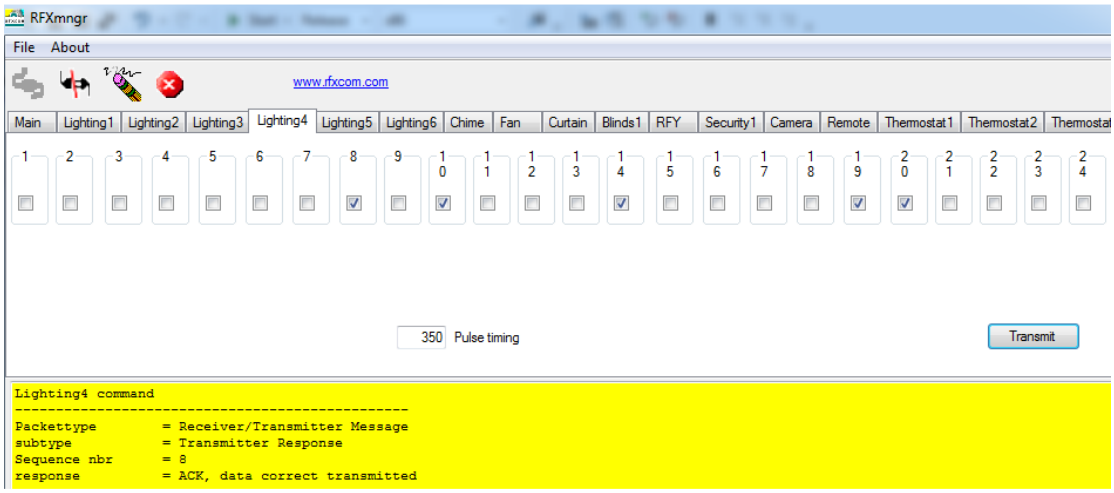

14. Known Lighting4 devices

14.1. Proluxx projection screen

Use Lighting4 with a pulse timing of 360

```
UP      1110 1101 0101 1001 0101 0010    ED 5A 52
STOP    1110 1101 0101 1001 0101 1000    ED 5A 58
DOWN    1110 1101 0101 1001 0101 0100    ED 5A 54
RESET   1110 1101 0101 1001 0101 0001    ED 5A 51
```

14.2. Kingpin (KP100) projection screen

Use Lighting4 with a pulse timing of 1040

```
UP              1110 0001 0100 0010 0010 0010        E1 42 22
STOP            1110 0001 0100 0010 0010 0100        E1 42 24
DOWN            1110 0001 0100 0010 0010 1000        E1 42 28
PROGRAM         1110 0001 0100 0010 0010 0001        E1 42 21
```

14.3. Mercury remote control mains sockets

http://mercury.avsl.com/product?range=ME5124
Use Lighting4 with a pulse timing of 188

```
1 OFF   01000100010101010011 1100
1 ON    01000100010101010011 0011

2 OFF   01000100010101011100 1100
2 ON    01000100010101011100 0011

3 OFF   01000100010101110000 1100
3 ON    01000100010101110000 0011

4 OFF   01000100010111010000 1100
4 ON    01000100010111010000 0011

5 OFF   01000100011101010000 1100
5 ON    01000100011101010000 0011
```

14.4. Conrad 034911 sockets

http://www.conrad.nl/ce/nl/product/034911/Draadloze-schakelaarset-5-delig
Use Lighting4 with a pulse timing of 425

Off = last 2 digits: 00
ON = last 2 digits: 01

```
Group   Unit
I       1 OFF   00 01 01 01 00 01 01 01 01 01 01 00
II      1 OFF   01 00 01 01 00 01 01 01 01 01 01 00
III     1 OFF   01 01 00 01 00 01 01 01 01 01 01 00
IV      1 OFF   01 01 01 00 00 01 01 01 01 01 01 00

I       1 OFF   00 01 01 01 00 01 01 01 01 01 01 00
I       2 OFF   00 01 01 01 01 00 01 01 01 01 01 00
I       3 OFF   00 01 01 01 01 01 00 01 01 01 01 00
I       4 OFF   00 01 01 01 01 01 01 00 01 01 01 00

I       1 OFF   00 01 01 01 00 01 01 01 01 01 01 00
I       1 ON    00 01 01 01 00 01 01 01 01 01 01 01
```

15. EC Declaration of Conformity

EC Declaration of Conformity CE

RFXCOM declares that the product:

RFXtrx

Brand: RFXCOM Type: RFXtrx433E

conforms with the essential requirements and other relevant provisions of the following directives and complies with the following standards applied:

R&TTE Directive 99/5/EC	EN 300 220-1 V2.3.1 (2010-02) EN 300 220-2 V2.3.1 (2010-02)
Low-voltage Directive 2006/95/EC	IEC 60950-1 (2005-12)
EMC Directive 2004/108/EC	EN 301 489-1 V1.9.2 (2011-09) EN 301 489-3 V1.4.1 (2002-08)

16. Warning:

- RF signals are possible disturbed and it has not been justified for this equipment at uses in circumstances where life-threatening or dangerous situations are possible.
- RFXCOM HARDWARE AND SOFTWARE IS NOT INTENDED FOR USE IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL SYSTEMS, LIFE SUPPORT MACHINES OR OTHER EQUIPMENT IN WHICH THE FAILURE OF THE SOFTWARE COULD LEAD TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE.

17. License

- You are allowed to use RFXCOM software, protocols and Written Materials with RFXCOM hardware only.
- All copyright and other proprietary notices associated with RFXCOM software, protocols and Written Materials shall be visible to all users.
- You may not sell, distribute, loan, rent, lease, license, sublicense or otherwise assign or transfer RFXCOM software or RFXtrx protocols or Written Materials unless expressly authorized in writing by RFXCOM.
- You may not use any RFXCOM device, software or protocol as part of an exclusive or patented product without the express prior written permission of RFXCOM.
- You may not alter, modify, adapt or create derivative works based on any part of RFXCOM software or protocols or Written Materials in any way, including translating, reverse engineering, disassembling or decompiling the software.

18. Copyright notice

- All RFXCOM hardware, software, protocols and Written Materials are protected by copyright laws, and may not be reproduced, republished, distributed, transmitted, displayed, broadcast or otherwise exploited in any manner without the express prior written permission of RFXCOM.
- Netherlands Copyright and international treaty provisions protect the SOFTWARE, HARDWARE, RFXtrx protocols and Written Materials and shall be subject to the exclusive jurisdiction of the Netherlands Courts
- RFXCOM reserves all rights not expressly granted herein.

19. Revision history

Version 0.0 – August 18, 2011
Initial version.
Version 1.0 – October 30, 2011
RFXflash under Mono added.
Version 2.0 – December 30, 2011
Updated for the production version with FTDI USB chip
Version 2.1 – January 18, 2012
Link for ACM to serial port added in Linux instruction.
EC Declaration of Conformity added
Version 2.2 – February 8, 2012
Protocols overview added
Screen dumps updated
Version 2.3 – February 16, 2012
Novatys planned
Version 2.4 – February 25, 2012
General information updated
Version 2.5 – March 1, 2012
Chapter added how to run RFXmngr or RFXflash on Linux.
Version 2.6 – March 14, 2012
Code tables added
Cresta, UPM added
Version 2.7 – March 15, 2012
Flash procedure updated
Version 2.8 – March 31, 2012
Phenix table added
Version 2.9 – March 31, 2012
AB400 and Phenix address extended
Version 2.10 – April 16, 2012
Linux USB - tty configuration updated
Version 2.11 – May 14, 2012
List of supported protocols updated.
Version 2.12 – June 8, 2012
Chapter added how to run RFXmngr or RFXflash on Mac OS
Version 2.13 – July 15, 2012
List of supported protocols updated
Version 2.14 – August 4, 2012
List of enabled protocols influence added
RFXtrx315 added
Version 2.15 – August 18, 2012
Enabled protocols table changed
Version 2.16 – August 26, 2012
Rubicson stektermometer added
ATI Remote Wonder II added
Version 2.17 – August 28, 2012
Table “sensitivity influenced” updated
Version 2.18 – September 18, 2012
Chapter 2.3 updated: BlindsT0 disables all other protocols
Version 2.19 – September 25, 2012
RFXFlash version required changed to 4.0.0.0
Version 2.20 – September 28, 2012
RF range reduction guide added
Version 2.21 – October 18, 2012
BlindsT2 and BlindsT3 added
Version 2.22 – October 24, 2012
Sartano added
Version 2.23 – October 31, 2012

Sensitivity table updated
Version 2.24 – November 7, 2012
Protocol table extended with the protocols to enable for receive
Version 2.25 – November 14, 2012
HE105 switch settings added
Version 2.26 – November 28, 2012
undec on explained
Version 2.27 – December 4, 2012
Use of Lighting4 commands for undec ARC
Brennenstuhl added
Version 2.28 – December 18, 2012
Receiver tab removed from RFXmngr
Version 2.29 – December 27, 2012
Lighting4 receive added
Version 2.30 – January 1, 2013
Raex motor added
Version 3.00 – January 4, 2013
RFXtrx433 Type1/Type2 firmware added
Version 3.01 – February 4, 2013
Supported protocols list updated
Version 4.00 – February 21, 2013
Chapter 8 - Lighting4 screen updated for RFXmngr 11.0.0.0
Known Lighting4 chapter added
Version 4.01 – March 13, 2013
Receive of LaCrosse sometimes influenced by enabled Hideki
Version 4.02 – June 8, 2013
MDREMOTE LED dimmer added
Conrad RSL2 added
Energenie added
Version 4.03 – September 27, 2013
How to find the MDREMOTE ID (chapter 7.6)
WS1200 added
Byron SX Chime added
Version 4.04 – November 15, 2013
Maverick ET-732 added
Alecto SA30 added
Oregon EW109 added
Revolt added
Version 4.05 – December 5, 2013
Blyss command explanation added.
Lighting4 - Mercury added
Lighting5 – dx.com RGB LED controller added
Version 4.06 – December 27, 2013
Chapter 2.2 updated
Version 4.07 – February 10, 2014
Chapter 7.8 added: how to find the dx.com RGB LED strip driver ID
Version 4.08 – March 20, 2014
ARC and Oregon3.0 updated in table 2.4.
Energenie 5-gang 429.950 added
Version 4.09 – April 4, 2014
BlindsT6 - DC106, YOODA, Röhrmotor24 RMF added
Version 4.10 – April 7, 2014
BlindsT7 - Forest added
Version 4.11 – April 28, 2014
RGB LED – clarified AD is LightwaveRF
Version 4.12 – May 21, 2014
Kambrook RF3672 added
RFY protocol added

Somfy programming instructions added
Supported protocol list RFXtrx433 updated.
Protocol list by function added

Version 4.13 – May 31, 2014
Opus TX300/Imagintronix Soil sensor added

Version 4.14 – June 18, 2014
Prega sensor added
Conrad 34911 Lighting4 coding added

Version 4.15 – June 25, 2014
Kambrook, Rubicson, Viking supported in ext firmware
Number of RFY remotes increased from 16 to 30

Version 4.16 – June 29, 2014
RFXmngr cannot be used on Linux

Version 4.17 – July 3, 2014
CoCo GDR2 added

Version 4.18 – July 14, 2014
Opus TX300 link added

Version 4.19 – July 25, 2014
Aoke relay added

Version 4.20 – August 25, 2014
Enabling protocols clearified.

Version 4.21 – September 5, 2014
Meade sensors added
Oregon BTHGN129 sensor added

Version 4.22 – September 18, 2014
Eurodomest added (NL - Action)
Byron MP001 added
WT0122 added
Procedures added to find the Eurodomest and TRC02 ver2 ID

Version 4.23 – September 24, 2014
Proove TSS330 fridge/freezer sensor added

Version 4.24 – October 9, 2014
BlindsT0 added in ext firmware
Alecto WS1700 and compatibles added

Version 4.25 – December 13, 2014
Smartwares radiator valve added
Proove TSS320 sensor added

Version 4.26 – January 2, 2015
SelectPlus200689101 White Chime (Action NL) added

Version 4.27 – January 6, 2015
SelectPlus200689103 Black Chime (Action NL) added

Version 4.28 – January 7, 2015
Proove outdoor sensors 311346 & 311501 added
Etekcity Wireless Remote Control Outlet Switch (US)

Version 5.00 – January 10, 2015
Copyright message updated
License chapter added
RFXmngr information updated

Version 5.01 – February 27, 2015
Chapter 2.5 Lighting4 receive is reduced with HomeEasy EU enabled.
Chamberlain tubular motor added
Sunpery blind motors added
DEA Systems receivers added
Envivo ENV-1348 chime added
Alecto WS4500 added

Version 5.02 – March 18, 2015
- 1byOne Easy Chime added
- BTX blind motors added
- Dolat DLM-1 blind motors added
- OTIO added

Version 5.03 – March 19, 2015
- TFA 30.3160 pool sensor added

Version 5.04 – April 14, 2015
- Chapter 4 updated with restrictions on Lighting4
- Siemens SF01 LF959RA50/LF259RB50/LF959RB50 extractor hood added
- Maplin N78KA added

Version 5.05 – May 2, 2015
- Dooya blind motors added
- Louvolite one touch motorised blinds added
- Alecto WS3500 added

Version 5.06 – May 4, 2015
- Current dx.com RGB LED drivers have a different protocol and are not supported.